


MULTIPLEX STRAIGHT BLADE PLUG-N-PLOW HANDHELD CONTROL


1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position.
The control keypad will glow green, indicating the control is on.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

3. Press the DOWN button for 1.7 seconds to engage the FLOAT mode. The FLOAT indicator light, located in the center of the keypad, will change from green to red.
To cancel the FLOAT mode, momentarily press the UP button.
FLOAT mode will automatically cancel after 17 minutes, and the FLOAT indicator light will turn back to green. To restart FLOAT mode, repeat step 3.

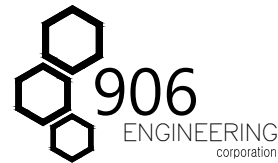

- WESTERN FISHER BLIZZARD
 BLIZZARD SPEEDWING (SB w/ Wings)

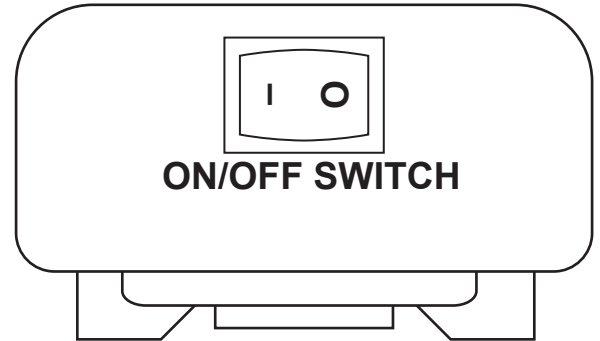

(LOCATED ON TOP OF HANDHELD CONTROL)

Blade Operation Time Outs


All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. The UP function will time out after 4.0 seconds, while the LEFT and RIGHT functions will time out after 3.0 to 5.0 seconds.

Automatic Shutdown

After being idle for approx. 22 minutes, the control will automatically turn off and the indicator light located at the center of the keypad will blink from red to green. To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

Soft Stop

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.

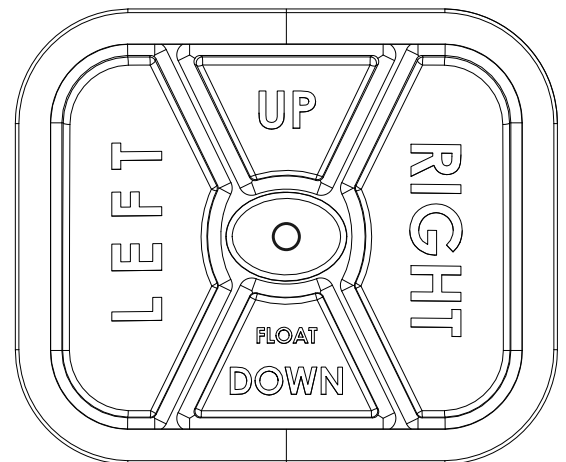

KEYPAD

Double Tap (UP & FLOAT)

A quick Double Tap of the UP button will automatically raise the plow for 4.0 seconds.
A quick Double Tap of the DOWN button will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN button).
NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the UP & DOWN buttons, it is an added feature designed to enhance the performance of the control.

Security Lock Out Reset


In the event that the OEM Security Lock Out feature prevents this control from working, follow the instructions below.

1. Press & Hold the Left & Right buttons, and turn the control ON. (the center indicator light turns RED) Then Release.
2. Press the UP button once (the light turns to BLUE)
3. Press the DOWN button once (the light turns to RED)
4. Press the UP button once (the keypad will light up GREEN) and the control is ready to use.

Note: Our control will reset your snowplows OEM system back to factory setting with no OEM security lock out features enabled.

POWER HITCH for BLIZZARD ONLY

For Blizzard Plows ONLY, when the control is turned ON the center GREEN indicator light will flash. This is the Power Hitch Mode. In this Mode the Power Hitch switch on your plow will work. Hit any button on the keypad to exit this Mode.

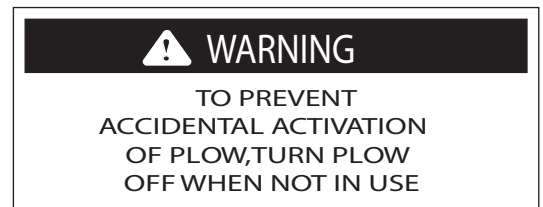

Timeouts given may vary according to plow type