



1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position.
The control keypad will glow green, indicating the control is on.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

3. Press the DOWN button for 1.3 seconds to engage the FLOAT mode. The FLOAT indicator light, located in the center of the keypad, will change from green to red. To cancel the FLOAT mode, momentarily press the UP button.
FLOAT mode will automatically cancel after 17 minutes, and the FLOAT indicator light will turn back to green. To restart FLOAT mode, repeat step 3.

Blade Operation Time Outs

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. The UP function will time out after 2.6 seconds, while the LEFT and RIGHT functions will time out after 3.0 seconds.

Automatic Shutdown

After being idle for approx. 20 minutes, the control will automatically turn off and the indicator light located at the center of the keypad will blink from red to green. To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

Soft Stop

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.

Double Tap (UP & FLOAT)

A quick Double Tap of the UP button will automatically raise the plow for 2.6 seconds.

A quick Double Tap of the DOWN button will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN button).

NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the UP & DOWN buttons, it is an added feature designed to enhance the performance of the control. This feature must be turned ON (U-SET, reverse side)

Shake Feature


To activate the Shake feature TAP & HOLD the LEFT or RIGHT button. The plow will move left to right rapidly to knock snow off.
TIP: We recommend lifting the plow before shaking.

This feature must be turned ON (U-SET, reverse side)


☒ MEYER (12-Pin) E-68 EXPRESS

Mount & Dismount Instructions

To enter Mount/Dismount Mode, turn the control OFF. Press & Hold the UP button and turn the control back ON. Release the UP button and the keypad should BLINK GREEN. You are now in Mount/Dismount Mode, you can now use the Mount & Dismount switch on the plow. Turn the control OFF to exit Mount/Dismount Mode.

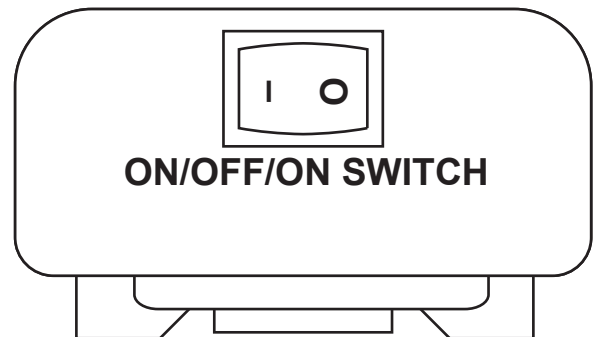

(LOCATED ON TOP OF HANDHELD CONTROL)

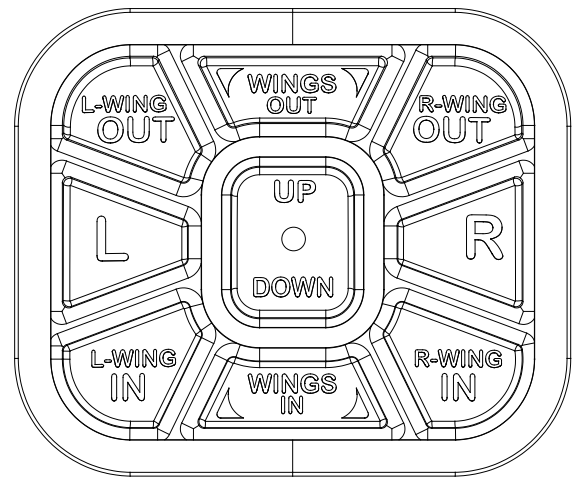

KEYPAD

For Hiniker, headlights will switch when the control is plugged in. If you would like a separate headlight switch, go to www.storksauto.com to purchase a headlight switch kit



WARNING

**TO PREVENT
ACCIDENTAL ACTIVATION
OF PLOW, TURN CONTROL
OFF WHEN NOT IN USE**

