

1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position. The control keypad will glow green (the control is ON).

NOTE: The ON/OFF switch can be used as an emergency stop when required.

3. Press the DOWN button for 1.7 seconds to engage the FLOAT mode. The FLOAT indicator light, located in the center of the keypad, will change from green to red. To cancel the FLOAT, momentarily press UP. FLOAT mode will automatically cancel after 17 minutes, and the FLOAT indicator light will turn back to green. To restart FLOAT mode, repeat step 3.

Blade Operation Time Outs

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. All functions will time out after about 4.0 seconds.

Automatic Shutdown

After being idle for approx. 20 minutes, the control will automatically turn off and the indicator light located at the center of the keypad will blink from red to green. To restart the control, turn the control OFF, and then back ON.

Soft Stop

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.

Double Tap (UP & FLOAT)

A quick Double Tap of the UP button will automatically raise the plow for 4.0 seconds.

A quick Double Tap of the DOWN button will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN button).

NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the UP & DOWN buttons, it is an added feature designed to enhance the performance of the control. This feature must be turned ON (U-SET, reverse side)

Security Lock Out Reset


In the event that the OEM Security Lock Out feature prevents this control from working, follow the instructions below.

1. Press & Hold the Left & Right buttons, and turn the control ON. (the center indicator light turns RED) Then Release.
2. Press the UP button once (the light turns to BLUE)
3. Press the DOWN button once (the light turns to RED or GREEN)
4. Press the UP button once (the keypad will light up GREEN) and the control is ready to use.


Note: Our control will reset your snowplows OEM system back to factory setting with no OEM security lock out features enabled.



☐ STRAIGHT BLADE ☐ VEE BLADE
☐ WING BLADE

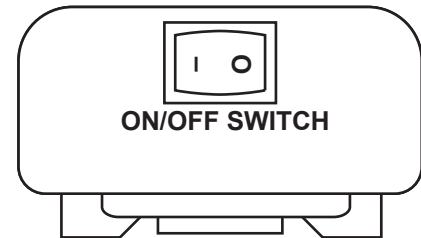

(LOCATED ON TOP OF HANDHELD CONTROL)

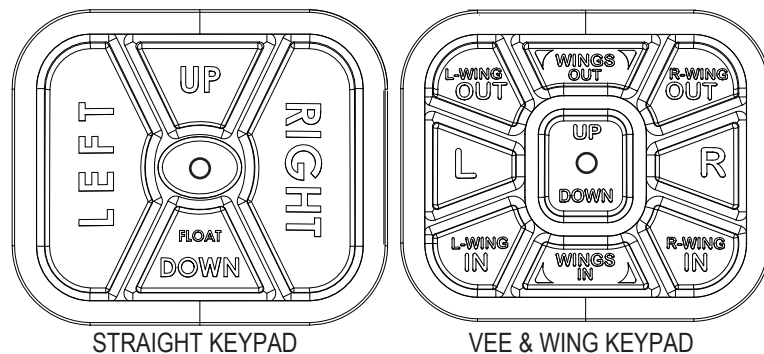

Down Pressure Feature


WARNING: The SnowEx Down Force (ScrapeMax) Kit must be installed (see SnowEx manual) on your plow in order for the Down Pressure feature to work. Turning ON (See U-SET) the feature without this Kit being installed could damage your plow.

To activate Down Pressure, put the control in Float, then Press & Hold the DOWN button for 2 seconds (indicator light will turn Blue).

Also, Pressing & Holding the DOWN button from the UP position for 3 or 4 seconds will first put the plow in FLOAT, then will go to Down Pressure. Press UP to exit the Down Pressure feature.

POWER HITCH for SNOWEX

Turn the control OFF. Press & Hold the UP button and turn the control ON (the center will blink Green). You are now in Power Hitch Mode and the power hitch switch on your plow will work. To exit hitch mode, turn the control's power OFF.

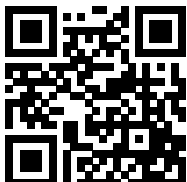

WARNING

**TO PREVENT
ACCIDENTAL ACTIVATION
OF PLOW, TURN CONTROL
OFF WHEN NOT IN USE**

