

1. Turn the ON/OFF switch on the control to the ON position. The indicator LED will glow green, indicating the control is ON.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

2. HOLD the handle to the DOWN position for 1.3 seconds to engage the FLOAT mode. The indicator LED will change from green to red. To cancel the FLOAT mode, momentarily press the handle to UP. FLOAT mode will automatically cancel after 20 minutes, and the indicator LED will turn back to green. To restart FLOAT mode, repeat step 2.

Blade Operation Time Outs

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. All functions will time out after 8.0 seconds.

Automatic Shutdown

After being idle for approx. 22 minutes, the control will automatically turn off and the indicator LED will blink from red to green.

To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

Soft Stop

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.

Double Tap (UP & FLOAT)-Must Activate U-SET

A quick Double Tap of the handle UP will automatically raise the plow for 6.0 seconds.

A quick Double Tap of the handle DOWN will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN).

NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the handle (UP & DOWN), it is an added feature designed to enhance the performance of the control.

Security Lock Out Reset


In the event that the OEM Security Lock Out feature prevents this control from working, follow the instructions below.

1. Hold the handle to the Left and turn the control ON. (the center indicator light turns RED) Then Release the handle.
2. Move the handle UP (WINGS IN) once (the light turns to BLUE)
3. Move the handle DOWN (WINGS OUT) once (turns to RED)
4. Move the handle UP (WINGS IN) once (turns to Green) and the control is ready to use.


Note: Our control will reset your snowplows OEM system back to factory setting with no OEM security lock out features enabled.



☐ STRAIGHT BLADE ☐ VEE BLADE
☐ WING BLADE

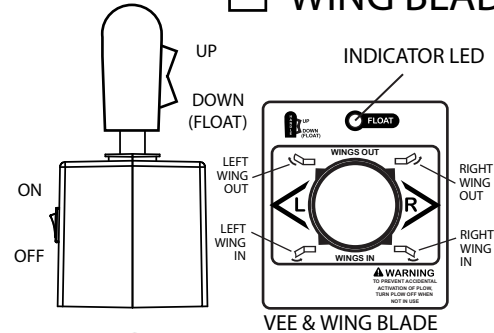

R = RIGHT
L = LEFT
Wings OUT = SCOOP
Wings IN = VEE

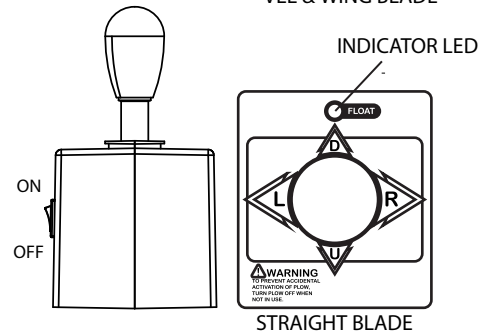

R = RIGHT
L = LEFT
U = UP
D = DOWN (FLOAT)

Down Pressure Feature


WARNING: The SnowEx Down Force (ScrapeMax) Kit must be installed (see SnowEx manual) on your plow in order for the Down Pressure feature to work. Turning ON (See U-SET) the feature without this Kit being installed could damage your plow.

To activate Down Pressure, put the control in Float, then Actuate the DOWN function for 2 seconds (indicator light will turn Blue).

Also, Actuating & Holding the DOWN function from the UP position for 3 or 4 seconds will first put the plow in FLOAT, then it will go to Down Pressure. Actuate UP to exit the Down Pressure feature.

POWER HITCH for SNOWEX

When the control is turned ON the center Green indicator light will flash. This is the Power Hitch Mode. In this Mode the Power Hitch switch on your plow will work. To exit this Mode, move the handle to any function

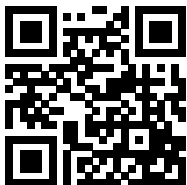

WARNING

**TO PREVENT
ACCIDENTAL ACTIVATION
OF PLOW, TURN CONTROL
OFF WHEN NOT IN USE**

