

1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position. The control keypad will glow green, indicating the control is on.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

3. Press the DOWN button for 1.3 seconds to engage the FLOAT mode. The FLOAT indicator light, located in the center of the keypad, will change from green to red. To cancel the FLOAT mode, momentarily press the UP button. FLOAT mode will automatically cancel after 17 minutes, and the FLOAT indicator light will turn back to green. To restart FLOAT mode, repeat step 3.

Blade Operation Time Outs

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. The UP function will time out after 2.6 seconds, while the LEFT and RIGHT functions will time out after 3.0 seconds.

Automatic Shutdown


After being idle for approx. 20 minutes, the control will automatically turn off and the indicator light located at the center of the keypad will blink from red to green. To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

Soft Stop

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.


Double Tap (UP & FLOAT)

A quick Double Tap of the UP button will automatically raise the plow for 2.6 seconds.
 A quick Double Tap of the DOWN button will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN button).
 NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the UP & DOWN buttons, it is an added feature designed to enhance the performance of the control.
 This feature must be turned ON (U-SET, reverse side)

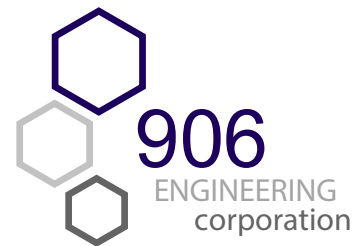


P/N EG0115-23-AS
HINIKER C-PLOW

Special Instructions for Hiniker C-Plow Control:
 ALL 3 BUTTONS WITH ARROWS FACING LEFT
 DO THE SAME THING = LEFT
 ALL 3 BUTTONS WITH ARROWS FACING RIGHT
 DO THE SAME THING = RIGHT
 FOR CENTER BUTTON, UP ARROW = UP
 DOWN ARROW = DOWN

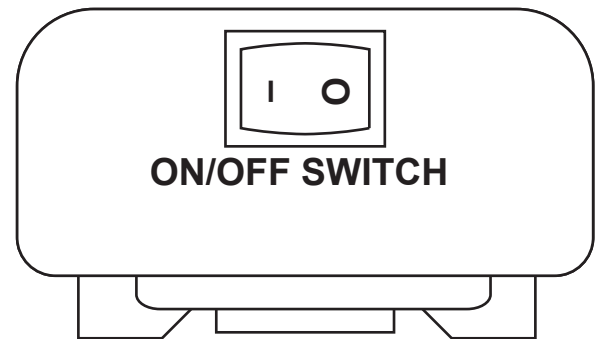


(LOCATED ON TOP OF HANDHELD CONTROL)

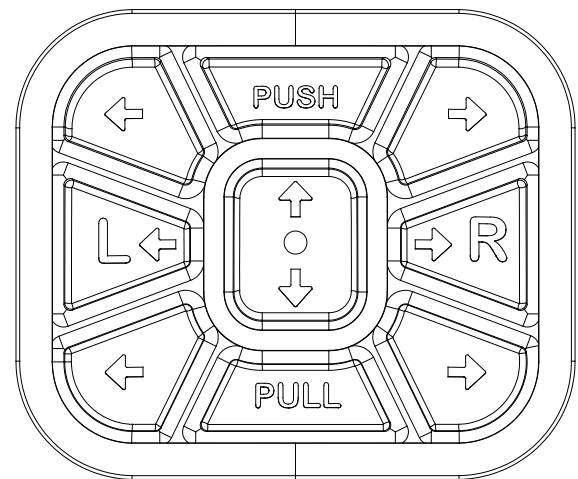

KEYPAD

For Hiniker, headlights will switch when the control is plugged in. If you would like a separate headlight switch, go to www.storksauto.com to purchase a headlight switch kit

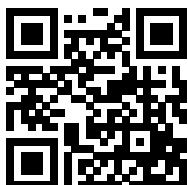

⚠ WARNING
 TO PREVENT
 ACCIDENTAL ACTIVATION
 OF PLOW, TURN CONTROL
 OFF WHEN NOT IN USE

