



1. Turn the vehicle ignition switch to the ON position.
2. Turn the ON/OFF switch on the control to the ON position. The control keypad will glow green, indicating the control is on.  
**NOTE: The ON/OFF switch can be used as an emergency stop when required.**
3. Press the DOWN button for 1.3 seconds to engage the FLOAT mode. The FLOAT indicator light, located in the center of the keypad, will change from green to red. To cancel the FLOAT mode, momentarily press the UP button. FLOAT mode will automatically cancel after 17 minutes, and the FLOAT indicator light will turn back to green. To restart FLOAT mode, repeat step 3.

**Blade Operation Time Outs**

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. The UP function will time out after 2.6 seconds, while the LEFT and RIGHT functions will time out after 3.0 seconds.

**Automatic Shutdown**

After being idle for approx. 20 minutes, the control will automatically turn off and the indicator light located at the center of the keypad will blink from red to green. To restart the control, turn the control OFF (ON/OFF switch) and then back ON.


**Soft Stop**

The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.


**Double Tap (UP & FLOAT)**

A quick Double Tap of the UP button will automatically raise the plow for 2.6 seconds.  
 A quick Double Tap of the DOWN button will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN button).  
**NOTE:** The Double Tap feature does not replace the normal operation (Press & Hold) of the UP & DOWN buttons, it is an added feature designed to enhance the performance of the control.  
 This feature must be turned ON (U-SET, reverse side)

- BOSS     WESTERN/FISHER
- SNOWDOGG     BLIZZARD
- HINIKER     MEYER (12-Pin)
- MEYER/DIAMOND (6-Pin)
- CURTIS     AIRFLO

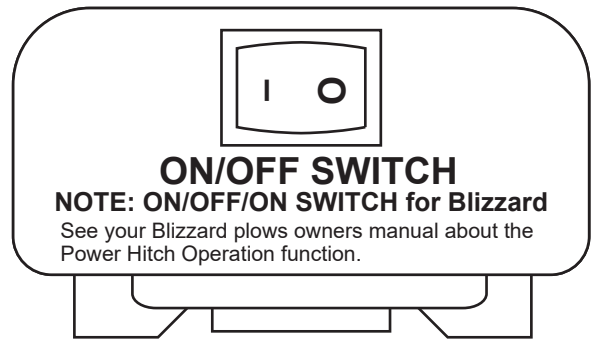


(LOCATED ON TOP OF HANDHELD CONTROL)

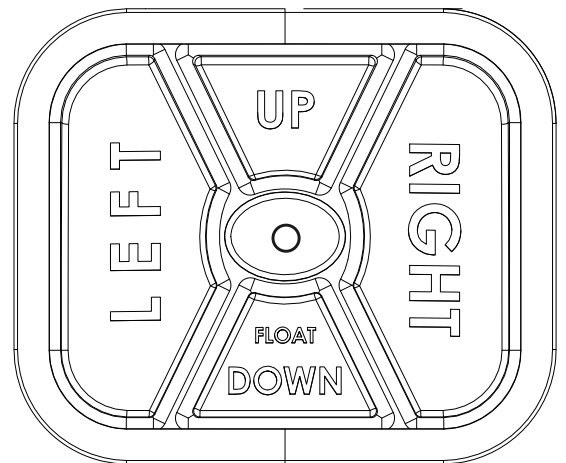

**KEYPAD**

\*For Hiniker & Meyer (12-Pin), headlights will switch when the control is plugged in. If you would like a separate headlight switch, go to [www.906engineering.com](http://www.906engineering.com) to purchase a headlight switch kit (90-0201-LS)\*

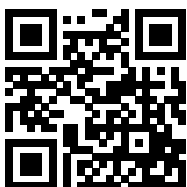

**⚠ WARNING**  
**TO PREVENT ACCIDENTAL ACTIVATION OF PLOW, TURN CONTROL OFF WHEN NOT IN USE**

