

WESTERN/FISHER/BLIZZARD/SNOWEX (MULTIPLY) 4 PIN AFTER MARKET
REPLACEMENT HARNESS

EM0101-50-AS


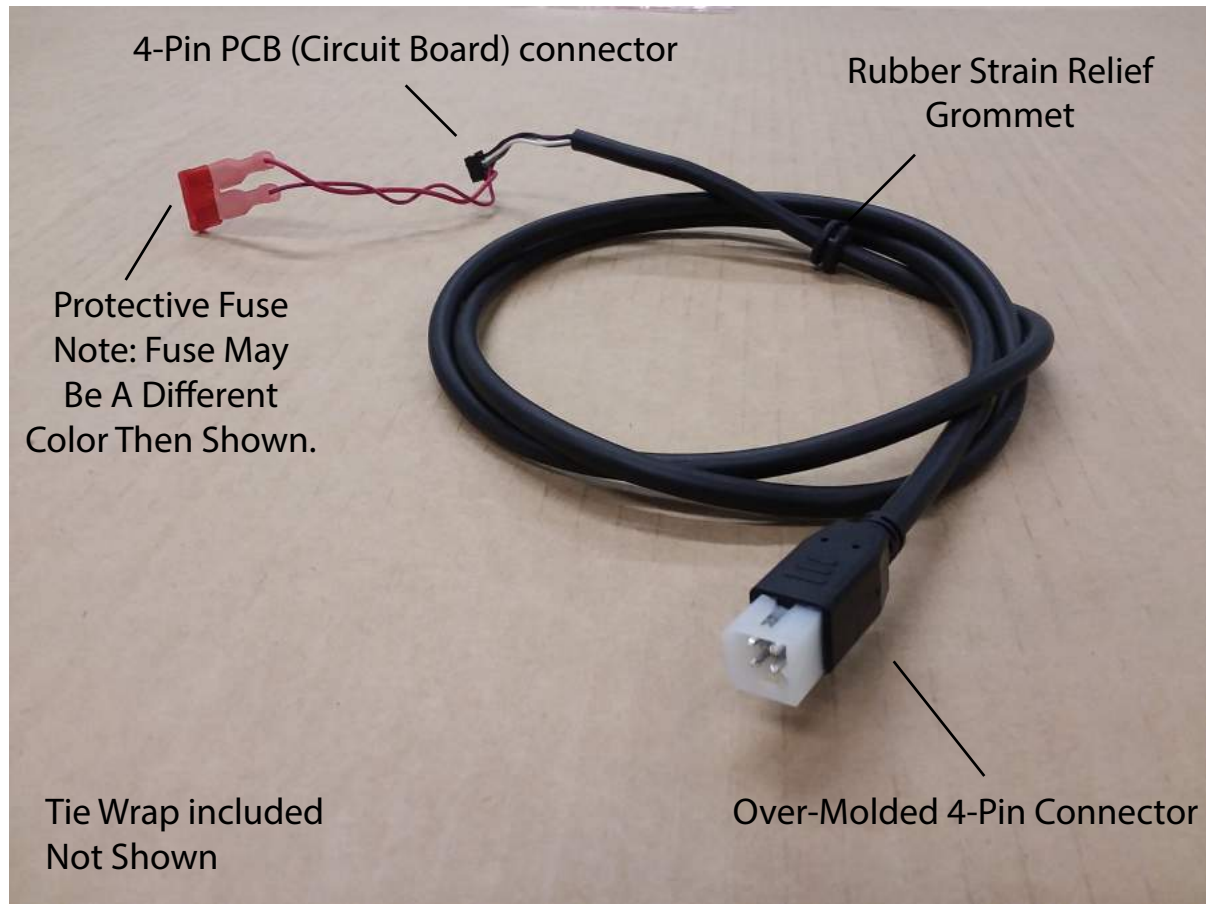



Diagram 1

Installation Instructions:

NOTE: Unplug the controller from the plow's vehicle harness (under the dash) before taking the controller apart.

1. Remove the 2 screws from the handle of the controller, separate the 2 sides of the handle and pull out the PCB/keypad.
2. Unplug the defective OEM harness.
3. Plug the 4-Pin PCB connector of the new straight cord into the 4-Pin connector of the PCB/keypad.
4. Slide the PCB/keypad into the appropriate groove of the left handle and route the harness as shown in Diagram 2.
5. Align the Strain Relief grommet as shown and tuck the Protective Fuse & wires securely in the area shown (Diagram 2). Make sure no wires will be pinched when the right side of the handle is put on.
6. Add the tie wrap to the area shown and cut off the excess (or tail of the tie wrap).
7. Put the right side of the handle in place and screw it all back together.
8. Plug the controller into the plow's vehicle harness (under the dash) and test it.

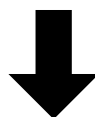

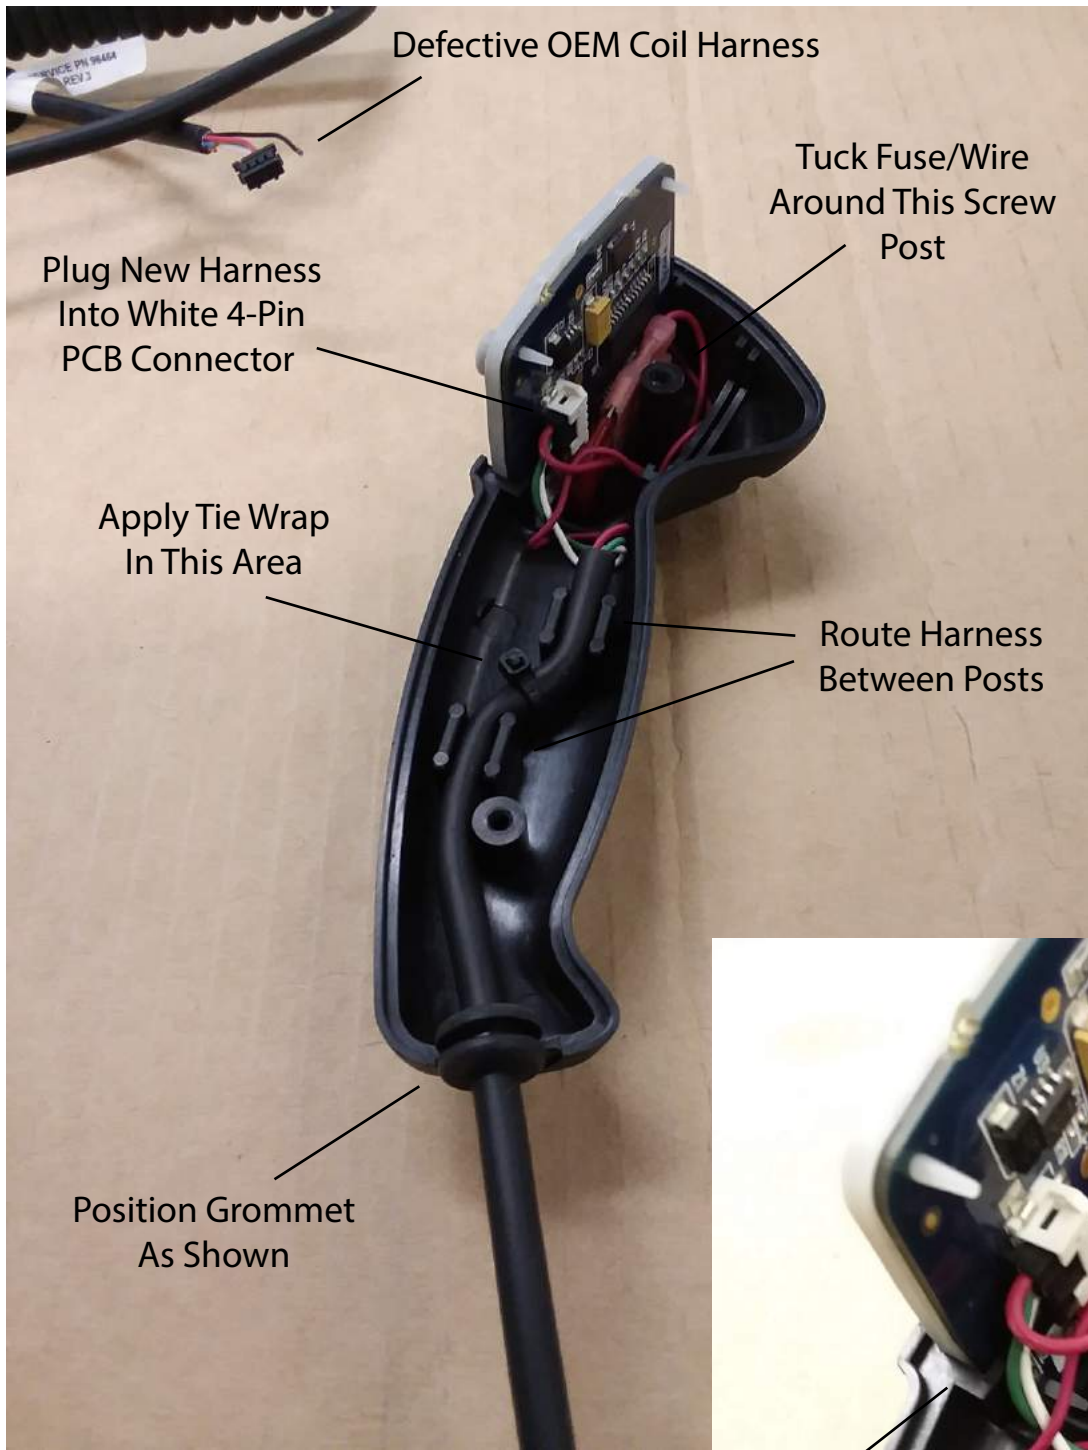

Defective OEM Coil Harness

Diagram 2

Tuck Fuse/Wire
Around This Screw
Post

Plug New Harness
Into White 4-Pin
PCB Connector

Apply Tie Wrap
In This Area

Route Harness
Between Posts

Position Grommet
As Shown



Be Careful Not
To Pinch The Wires
In This Area When
Adding The Right
Handle

Diagram 3