


# INSTALLATION AND OPERATING INSTRUCTION FOR HEADLIGHT ADAPTERS

**Tip:**  
Apply Dielectric Grease  
to all headlight adapter  
connectors to help  
prevent corrosion.

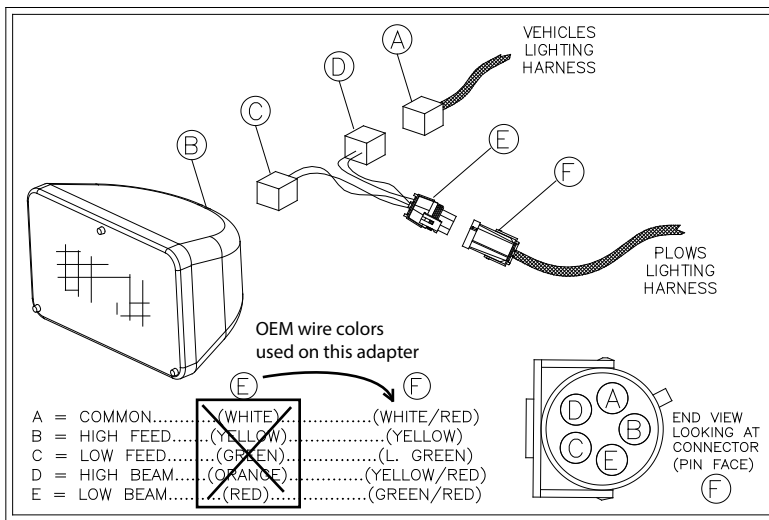

- Step #1: Remove existing vehicle headlight connector (A) from the headlight (B).
- Step #2: Plug mating headlight connector (C) into the vehicle headlight receptacle (B).  
Note: If more then one set of plugs are present, inspect the connectors for any differences they may have (notches or color) and plug them accordingly.
- Step #3: Plug existing vehicle headlight connector (A) into the mating headlight adapter connector (D).
- Step #4: Plug the five-pin connector (E) into the white/grey five-pin connector (F) on the auxiliary lighting harness.
- Step #5: Repeat steps 1 - 4 on the other headlight.
- Step #6: Check for proper operation of headlights.
- Step #7: Check that all wiring is secure and clear of hot or moving parts.

## Replacement Snowplow Headlight Adapter Kit



Part Number:

# EF0914-20-20K

HEADLIGHT NUMBERS:  
HP6545, H6545, H4666  
2E Small Halogen Lamp

KIT INCLUDES:

- (2) - Headlight Adapters
- (1) - Installation Instructions

This Headlight Adapter Kit Replaces:

HINIKER # 38813043  
CURTIS # 1HL5  
BLIZZARD # 62053  
SNO-KING #SK6143

906engineering.com

