INSTALLATION AND OPERATING INSTRUCTION FOR HEADLIGHT ADAPTERS

Tip:
Apply Dielectric Grease to all headlight adapter connectors to help prevent corrosion.

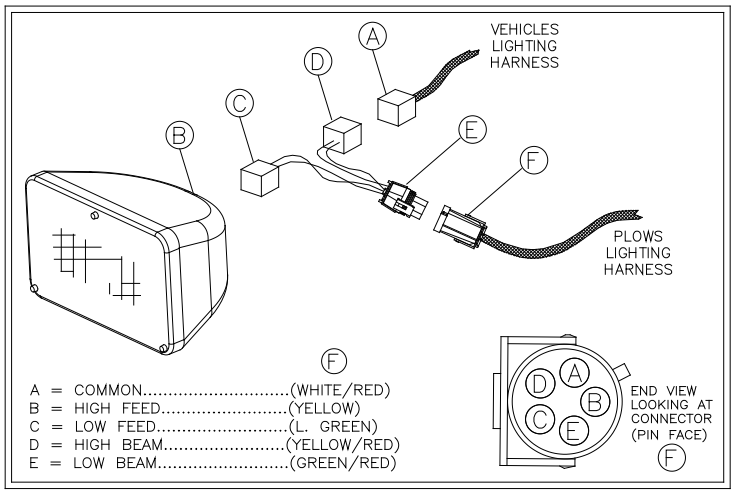

Step #1: Remove existing vehicle headlight connector (A) from the headlight (B).
Step #2: Plug mating headlight connector (C) into the vehicle headlight receptacle (B).
Note: If more then one set of plugs are present, inspect the connectors for any differences they may have (notches or color) and plug them accordingly.
Step #3: Plug existing vehicle headlight connector (A) into the mating headlight adapter connector (D).
Step #4: Plug the five-pin connector (E) into the white/grey five-pin connector (F) on the auxiliary lighting harness.
Step #5: Repeat steps 1 - 4 on the other headlight.
Step #6: Check for proper operation of headlights.
Step #7: Check that all wiring is secure and clear of hot or moving parts.

Replacement Snowplow Headlight Adapter Kit

906 ENGINEERING corporation

Part Number:
EF0914-20-18K

HEADLIGHT NUMBERS:
H9005, H9006

KIT INCLUDES:
(2) - Headlight Adapters
(1) - Installation Instructions

This Headlight Adapter Kit Replaces:

HINIKER	# 38813042
CURTIS	# 1HL4
BLIZZARD	# 62013
AIR-FLO	# 07195
SNO-KING	# SK6130

906engineering.com