


INSTALLATION AND OPERATING INSTRUCTION FOR HEADLIGHT ADAPTERS

Tip:
Apply Dielectric Grease
to all headlight adapter
connectors to help
prevent corrosion.

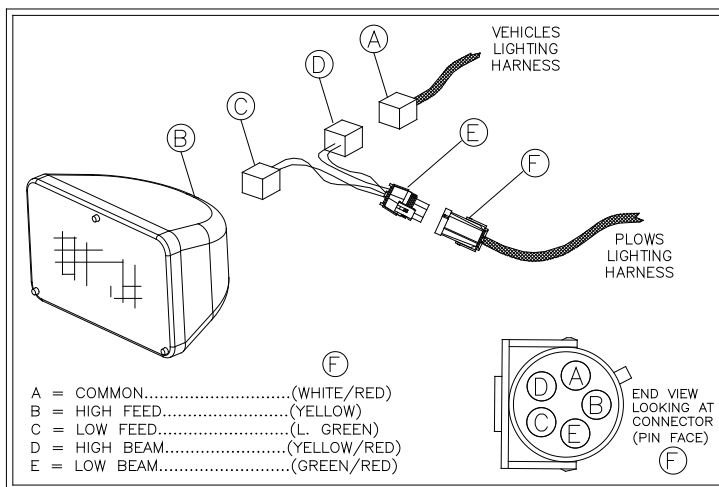

- Step #1: Remove existing vehicle headlight connector (A) from the headlight (B).
- Step #2: Plug mating headlight connector (C) into the vehicle headlight receptacle (B).
Note: If more then one set of plugs are present, inspect the connectors for any differences they may have (notches or color) and plug them accordingly.
- Step #3: Plug existing vehicle headlight connector (A) into the mating headlight adapter connector (D).
- Step #4: Plug the five-pin connector (E) into the white/grey five-pin connector (F) on the auxiliary lighting harness.
- Step #5: Repeat steps 1 - 4 on the other headlight.
- Step #6: Check for proper operation of headlights.
- Step #7: Check that all wiring is secure and clear of hot or moving parts.

Replacement Snowplow Headlight Adapter Kit



Part Number:

EF0914-20-16K

HEADLIGHT NUMBERS:

H9004

KIT INCLUDES:

- (2) - Headlight Adapters
- (1) - Installation Instructions

This Headlight Adapter Kit Replaces:

HINIKER # 38813044
CURTIS # 1HL6
BLIZZARD # 62011
SNO-KING # SK6140

906engineering.com

