

1. Turn the ON/OFF switch on the control to the ON position. The indicator LED will glow green, indicating the control is ON.

NOTE: The ON/OFF switch can be used as an emergency stop when required.

2. HOLD the handle to the DOWN position for 1.3 seconds to engage the FLOAT mode. The indicator LED will change from green to red. To cancel the FLOAT mode, momentarily press the handle to UP. FLOAT mode will automatically cancel after 20 minutes, and the indicator LED will turn back to green. To restart FLOAT mode, repeat step 2.



P/N EL0105-03-AS
UNIVERSAL STRAIGHT BLADE
JOYSTICK CONTROL

Blade Operation Time Outs

All control functions automatically time out (shut off) after a period of time. This helps reduce wear on the pump motor and prevent unnecessary battery drain. All functions will time out after 8.0 seconds.

Automatic Shutdown

After being idle for approx. 22 minutes, the control will automatically turn off and the indicator LED will blink from red to green.

To restart the control, turn the control OFF (ON/OFF switch) and then back ON.

Soft Stop


The Control automatically allows the blade to coast to a soft stop. This results in smoother operation and decreased wear on the plows hydraulic system.

Double Tap (UP & FLOAT)


A quick Double Tap of the handle UP will automatically raise the plow for 6.0 seconds.

A quick Double Tap of the handle DOWN will automatically engage FLOAT (WARNING: Plow will immediately drop to the ground when Double Tapping the DOWN).

NOTE: The Double Tap feature does not replace the normal operation (Press & Hold) of the handle (UP & DOWN), it is an added feature designed to enhance the performance of the control.

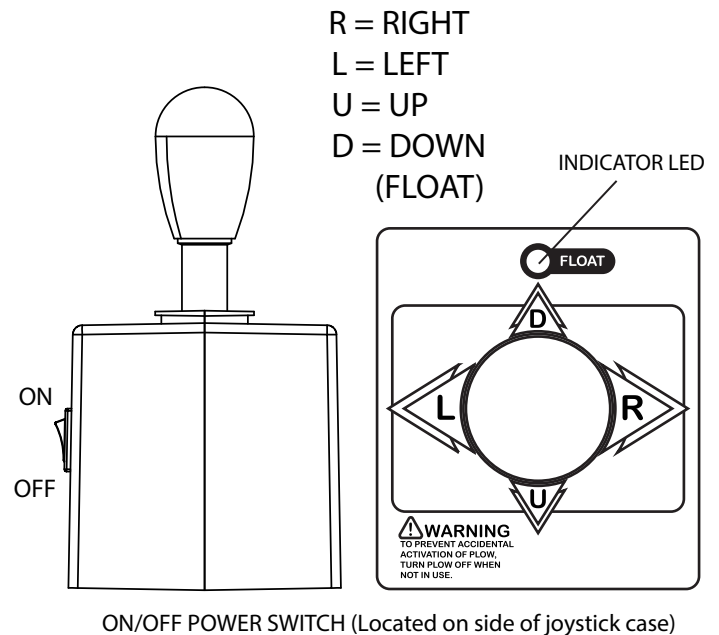

ON/OFF POWER SWITCH (Located on side of joystick case)

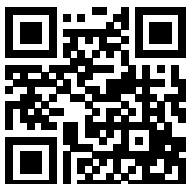

WARNING

**TO PREVENT
ACCIDENTAL ACTIVATION
OF PLOW, TURN CONTROL
OFF WHEN NOT IN USE**

